

Vantage VUE® INSTALLATION DIAGRAM

Vantage Vue Console Retransmitting data to a Weather Envoy™

This diagram shows a Vantage Vue sensor suite wirelessly connected to both a Vantage Vue console and a Weather Envoy, which is connected to a computer via a WeatherLink data logger. The console is retransmitting the sensor suite data to the Weather Envoy. The transmission distance between a sensor suite and Envoy or console is up to 1000' (300 m) line-of-sight, or up to 600' (180 m) through walls and other obstructions. The cable (included with WeatherLink) distance between an Envoy and a computer is 8' (2.4 m) using a USB connection. Multiple receivers (both Envoys and consoles) can "listen" to the same transmitting station or set of stations.

