


Vantage VUE® INSTALLATION DIAGRAM

Weather Envoy™ Retransmitting Data to a Vantage Vue® Console

This diagram shows a Vantage Vue sensor suite wirelessly connected to both a Vantage Vue console and Weather Envoy, which is connected to a computer via a WeatherLink data logger. The Weather Envoy is retransmitting the sensor suite data to the console. The transmission distance between a sensor suite and Envoy or console is up to 1000' (300 m) line-of-sight or up to 600' (180 m) through walls and other obstructions. The cable (included with WeatherLink) distance between an Envoy and a computer is 8' (2.4 m) using a USB connection. Multiple receivers (Envoys and consoles) can "listen" to the same transmitting station or set of stations.

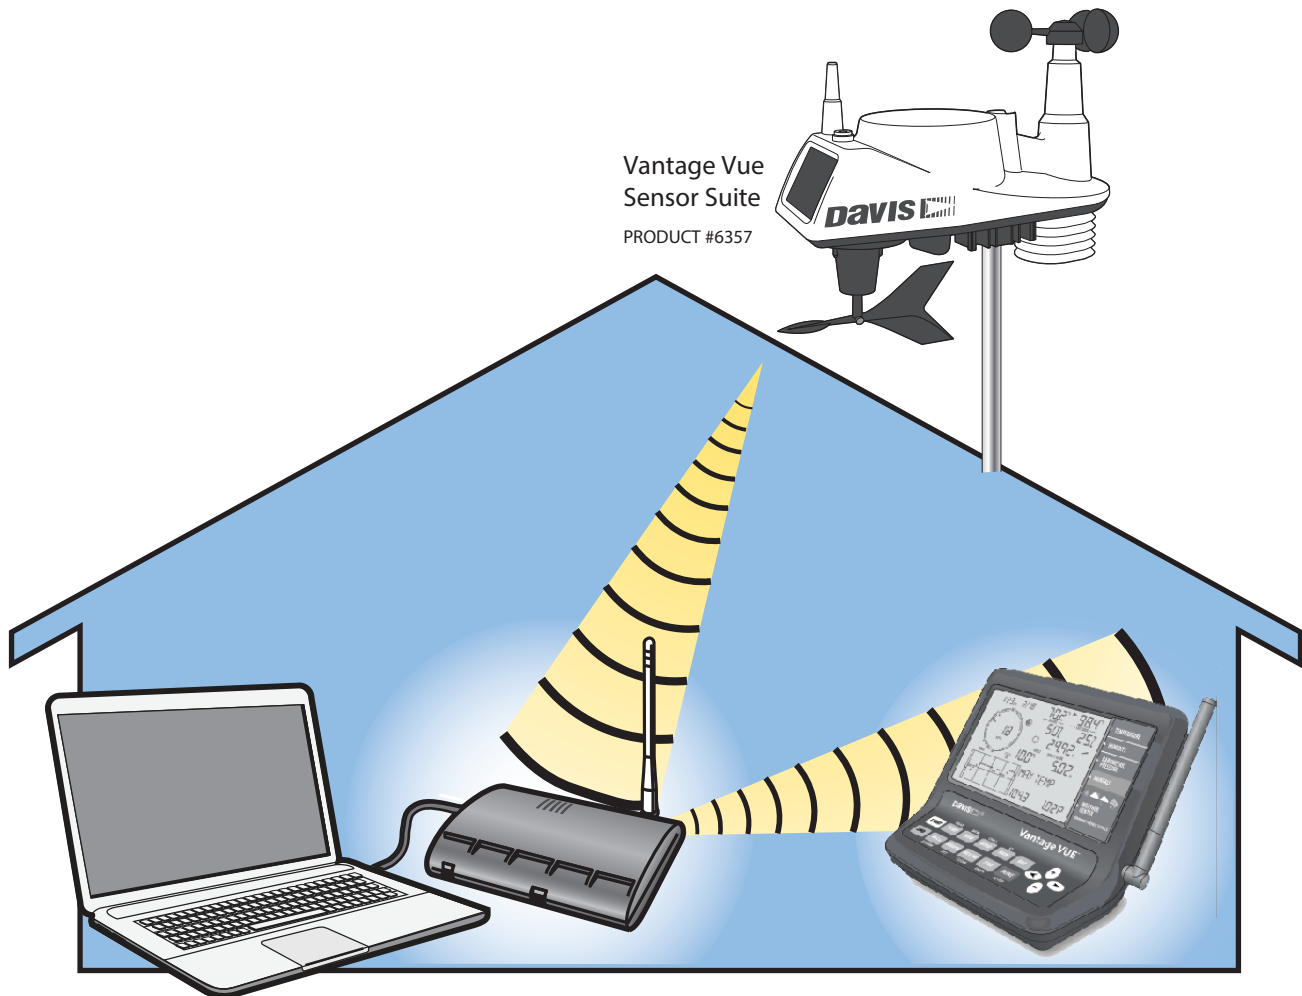

Vantage Vue
Sensor Suite
PRODUCT #6357

Weather Envoy

PRODUCT #6316

and

WeatherLink

PRODUCT #6510USB or 6520

Vantage Vue Console

PRODUCT #6351