

Vantage VUE® INSTALLATION DIAGRAM

Transmitting to a Vantage Vue Console and a Vantage Pro2 Console Simultaneously

This diagram shows a Vantage Vue sensor suite wirelessly connected to both a Vantage Vue console and a Vantage Pro2 console. The Vantage Vue sensor suite can transmit to both Vantage Pro2 and Vantage Vue consoles. The transmission distance between a sensor suite and console is up to 1000' (300 m) line-of-sight, or up to 600' (180 m) through walls and other obstructions. The consoles can also retransmit to each other, which can allow you to increase the distance between the sensor suite and one of the consoles. Multiple receivers (such as consoles) can listen to the same sensor suite.

