

# Vantage PRO2™ INSTALLATION DIAGRAM

## Weather Envoy™ Retransmitting Data to a Vantage Pro2™ Console

This diagram shows an Integrated Sensor Suite (ISS) wirelessly connected to both a Vantage Pro2 Console and Weather Envoy, which is connected to a computer. The Weather Envoy is retransmitting the ISS data to the Vantage Pro2. The transmission distance between an Integrated Sensor Suite and Envoy or Console is up to 1000' (300 m) line of sight or up to 600' (180 m) through walls and other obstructions. The cable distance between an Envoy and a computer is 8' using a USB connection. Multiple receivers (both Envoy and Vantage Pro2 consoles) can listen to the same station or set of stations.

