

Vantage PRO2™ INSTALLATION DIAGRAM

Vantage Pro2™ Console Receiving Data from up to 8 Different Transmitting Stations

This diagram demonstrates how each Vantage Pro2 Console can receive data from up to eight different transmitting stations.

