

## Gateway Status LEDs

LED Behavior	Indicates	What to do
No BLE LED and no Cell LED	Gateway is in low-power mode.	Touch the recessed touch pads.
BLE LED flashes blue	Gateway is ready to connect to the EnviroMonitor app.	Use the EnviroMonitor app to configure the Gateway.
Bluetooth LED is solid blue	Gateway is connected to the EnviroMonitor app.	
Cell LED is solid amber for 3 sec. when powering up.	Gateway is powering up.	
Cell LED is blinking green	Gateway is trying to connect to Weatherlink.com.	Wait for the LED to turn solid green.
Cell LED is solid green	Connected to Weatherlink.com.	
Cell LED is blinking amber	Gateway is trying to connect to WeatherLink.com and battery is low.	Charge battery. See troubleshooting in manual.
Cell LED is solid amber	Connected to WeatherLink.com but battery is low.	Charge battery. See troubleshooting in manual.
Cell LED is blinking red	Gateway cannot access the cell network or WeatherLink.com.	See troubleshooting in manual.
Cell LED is solid red	Gateway has not been configured in the EnviroMonitor app.	Use EnviroMonitor app to configure the Gateway.

7356.267 A